

Swing Thru Lifting Operations



Transfer Between Swing Thru and Ground



- The booms lift and swing the container in one continuous movement placing it gently on the ground.
- The reverse operation loads a container from the ground to the Swing Thru.
- This operation can be carried out to the left and right sides.

Transfer Between Swing Thru and Second Vehicle (Truck/Trailer/Railwagon)



- The booms lift and swing the container off the Swing Thru, placing it onto the second vehicle.
- The reverse operation loads a container from a second vehicle to the Swing Thru.
- This operation can be carried out to the left and right sides.

Transshipment Between Second Vehicle (Truck/Trailer/Railwagon) and Ground



- The Swing Thru lifts the container off the second vehicle and passes it over the host vehicle in one continuous movement, placing the container on the ground on the opposite side of the host vehicle.
- The reverse operation loads a container from the ground to the second vehicle.
- This operation can be carried out from left to right or right to left.

Transshipment Between Second and Third Vehicles (Trucks/Trailers/Railwagons)



- The Swing Thru lifts the container off the second vehicle and passes it over the host vehicle in one continuous movement, placing the container on the third vehicle.
- This operation can be carried out from left to right or right to left.